

## Video User manual

<https://youtu.be/W14-nAvq60Y>



## INDEX

- 1-BATTERY INSTALLATION (min 00:06)
- 2-DATE AND TIME 1ST SET (min 00:33)
- 3-UNITS SET (min 01:05)
- 4-TORQUE MODE (min 01:22)
- 5-ANGLE MODE (min 02:25)
- 6-TORQUE AND ANGLE CYCLE COUNTING (min 03:20)
- 7-DATA DOWNLOAD (min 03:50)
- 8-MAIN MENU: SETTING HEAD AND LENGHT (min 05:51)
- 9-MAIN MENU: VIEWING STORED TORQUE AND ANGLE DATA (min 07:39)
- 10-MAIN MENU: DELETING STORED TORQUE AND ANGLE DATA (min 08:13)
- 11-VIEWING AND CLEARING WRENCH CYCLE COUNTER (min 08:38)
- 12-MAIN MENU: LANGUAGE (min 09:17)
- 13-ADDING A TORQUE PRESET (min 09:55)
- 14-ADDING AN ANGLE PRESET (min 10:56)
- 15-EDITING A PRESET (min 11:34)
- 16-DELETING A PRESET (min 12:04)
- 17-ADDING MULTIPLE PRESETS (min 12:18)
- 18-ADVANCED SETTINGS - SHOW INFO (min 13:16)
- 19-ADVANCED SETTINGS - SLEEP TIME (min 13:35)
- 20-ADVANCED SETTINGS - LCD CONTRAST (min 13:47)
- 21-ADVANCED SETTINGS - KEY BEEP (min 14:12)
- 22-ADVANCED SETTINGS - TARGET BEEP (min 14:27)
- 23-ADVANCED SETTINGS - AUTO BACKLIGHT (min 14:38)
- 24-ADVANCED SETTINGS - TOGGLE BACKLIFHT (min 14:46)
- 25-ADVANCED SETTINGS - VIBRATOR CONFIG (min 14:50)
- 26-ADVANCED SETTINGS - BATTERY TYPE (min 14:59)
- 27-ADVANCED CONFIGURATION - DATE AND TIME SET (min 15:15)
- 28-ADVANCED CONFIGURATION - CAL INTERVAL ( min 16:05)
- 29-ADVANCED CONFIGURATION - CAL COUNTDOWN (min 16:28)
- 30-ADVANCED CONFIGURATION - PRESET LOCK - UNLOCK (min 16:49)
- 31-ADVANCED CONFIGURATION - JOB MODE (min 17:46)
- 32-ADVANCED CONFIGURATION - MODE SETUP (min 19:20)
- 33-ADVANCED CONFIGURATION -MODE SETUP - TORQUE THEN ANGLE (min 20:13)
- 34-ADVANCED CONFIGURATION -MODE SETUP - TORQUE AND ANGLE (min 20:42)